

Bargman L400 lock latch changeout

Remove the two screws securing the handle and back plate from the rear of the door.

Remove the two screws holding the lock assembly on the latch side of the door

You should now be looking at the lock assembly proper.




Tap out the pin holding the outside handle. It only comes out one way. One end is knurled.



The knurled end of the pin



Once the pin is out far enough the external handle drops out

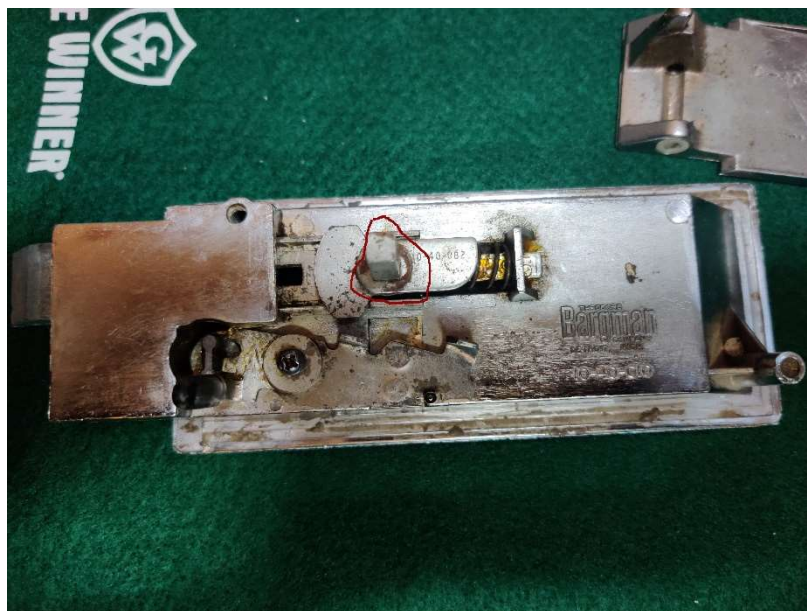


Remove the circlip circled above and the arm under it.




The assembly should now look like this

Now remove the next circlip on that same shaft. As shown below

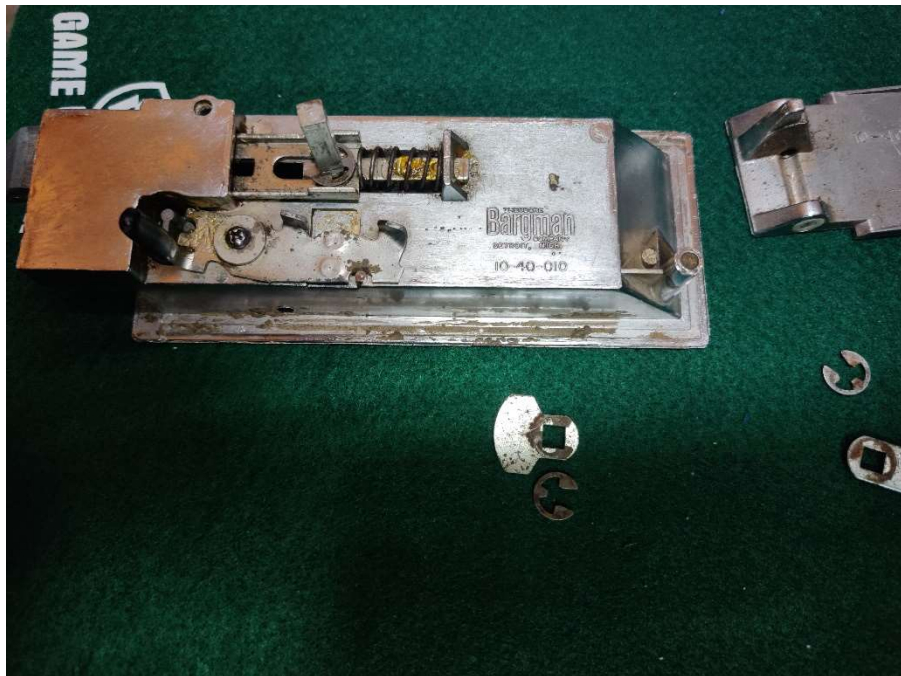

And the actuator under it.

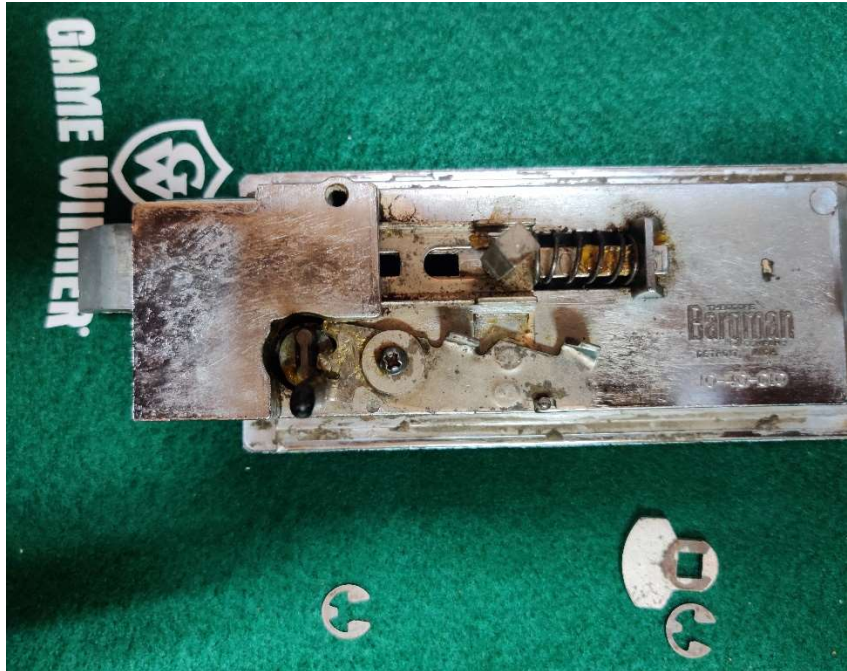

You should now have this.


Flip the lock over



And remove the small Circlip.



And remove the shaft from the rear.

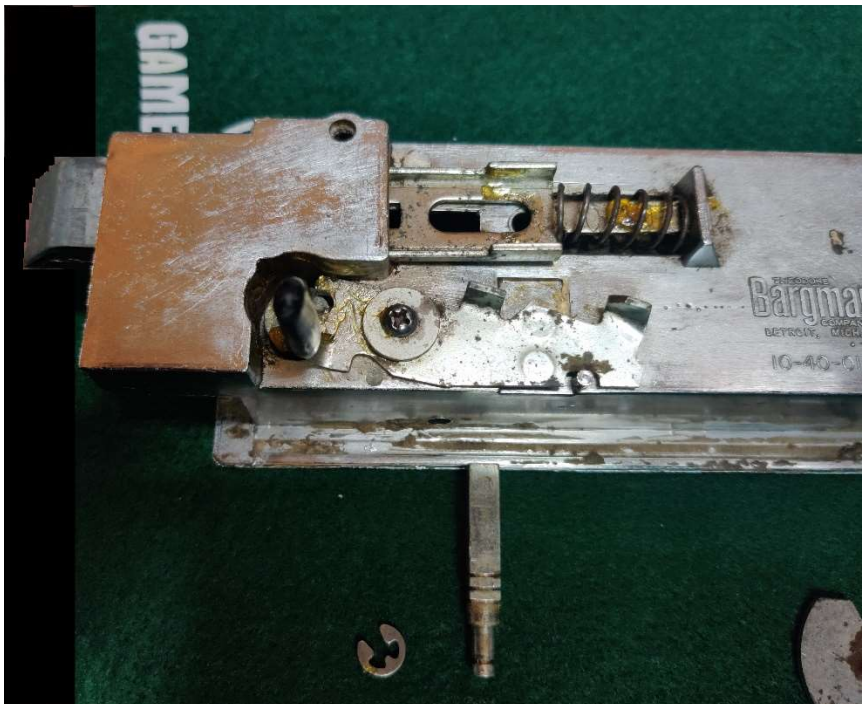

Now slide the latch out



Old latch out. Slide the new latch in and reassemble in reverse